

# ativa<sup>®</sup>

## **HD Digital Pocket Camcorder User Manual**

**HD Videocámara Digital de Bolsillo**

**Manual del usuario**

**HD Numérique Caméscope de Poche**

**Manuel de l'utilisateur**

**Model  
V22**

**Modelo  
V22**

**Modèle no  
V22**



Call for technical support **1-877-777-4357**

Llame para asistencia técnica **1-877-777-4357**

Appelez le soutien technique **1-877-777-4357**

Before operating this unit, please read all instructions.

Lea atentamente las instrucciones antes de usar este producto.

Veuillez lire toutes les instructions avant d'utiliser ce produit.

# Read This Before Using the Camcorder

## SAFETY INSTRUCTIONS

- Do not drop, puncture or disassemble the camcorder.
- Use the camcorder with care. Rough handling may damage the internal components.
- Do not expose the camcorder to high temperature. Avoid contact with water.
- Please notice that the camcorder body may become warm when operating it for an extended period.
- Test for proper operation before using the camcorder.
- Only use accessories supplied by the manufacturer.
- Use only the type of battery that came with your camcorder.
- Remove the battery if the camcorder is not going to be used for long periods.

## Product Information

- Designs and specifications of the camcorder are subject to change without notice. This includes primary product specifications, software, and this user's manual.
- This User's Manual is a general reference guide for the camcorder.
- The illustrations in this manual may not be the same as the actual design of your camcorder and those you see on the LCD screen.

# Contents

<b>Read This Before Using the Camcorder .....</b>	<b>2</b>
<b>Section 1 Getting to Know Your Camcorder .....</b>	<b>4</b>
<b>Section 2 Getting Started.....</b>	<b>7</b>
<b>Section 3 Using the Record Mode .....</b>	<b>9</b>
<b>Section 4 Using the Playback Mode .....</b>	<b>20</b>
<b>Section 5 Setting Your Camcorder .....</b>	<b>25</b>
<b>Section 6 Viewing Photos and Videos on TV.....</b>	<b>29</b>
<b>Section 7 Viewing Video &amp; Photo on PC .....</b>	<b>30</b>
<b>Section 8 Uploading Files to Internet .....</b>	<b>31</b>
<b>Section 9 Specifications and System Requirements .....</b>	<b>34</b>
<b>Section 10 Troubleshooting .....</b>	<b>36</b>
<b>FCC Statement.....</b>	<b>37</b>
<b>Limited One Year Product Warranty .....</b>	<b>38</b>

# Section 1

## Getting to Know Your Camcorder

### Overview

The camcorder is equipped with a 5 Mega Pixel sensor that can take H.264 format videos. The H.264 technology allows for extended video recording with less memory. High quality images up to 16 megapixels can also be delivered smoothly. With a color LCD monitor, you can view and examine the videos and photos easily.

The 3" LCD touch panel is an ideal platform for you to operate your camcorder. The menu options are accessible with your fingers. With the touch panel, you can select the options directly and quickly.

The camcorder also features video recording at an HD resolution of 1920x1080. You can also connect it to an HDTV via an HDMI cable, and easily playback the recorded high-definition videos on the wide screen HDTV.

Moreover, the camcorder has an advanced uploading feature. With the exclusive built-in **Internet Direct** application, you can upload the videos captured by the camcorder to the web site more effortlessly .

ISO sensitivity and color balance can either be adjusted automatically or changed manually. A 16x digital zoom helps you to control over the videos and photos you take.

The varied effect options, such as Time Lapse and Slow Motion, make recording more fun.

The built-in memory allows you to take photos and to record videos without a memory card. The memory card slot allows users to increase the storage capacity.



#### Note

- Partial memory of the built-in memory is used for the camcorder's Firmware code and software.

 


#### Information


- H.264 is the latest video compression format and used commonly for HD video recording. The H.264 technology uses a high compression rate to convert digital video into a format that takes less capacity and maintains high video quality. By compressing video into smaller size , you can take more videos and photos.
- Please install the bundled ArcSoft MediaImpression application on the CD. This application contains the H.264 Codec (ffdshow-a free software under GPL license) for viewing the AVI (H.264) videos correctly on your PC. The ArcSoft MediaImpression application is compatible with Windows based systems only.

### Standard Accessories


Unpack the package and make sure all standard accessories listed are included:

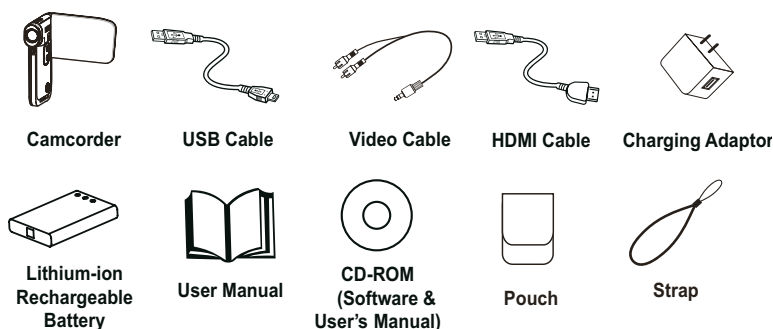


## Front View

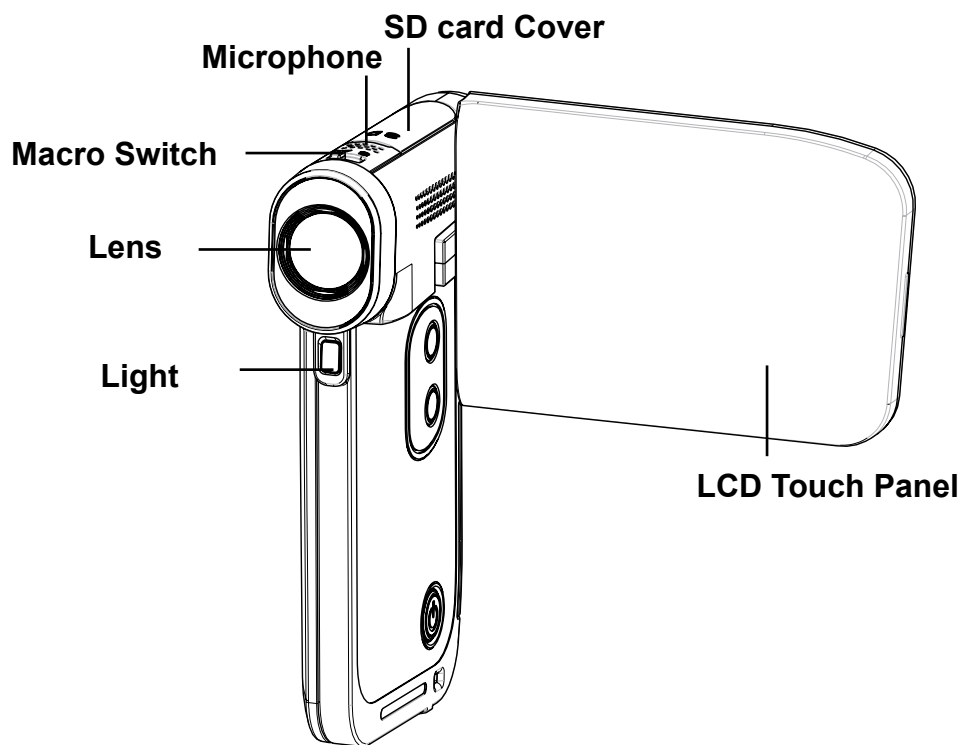 


## Rear View

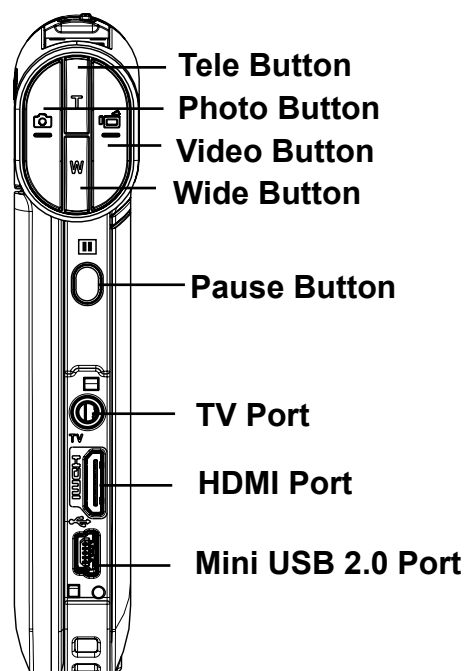 

## Side View

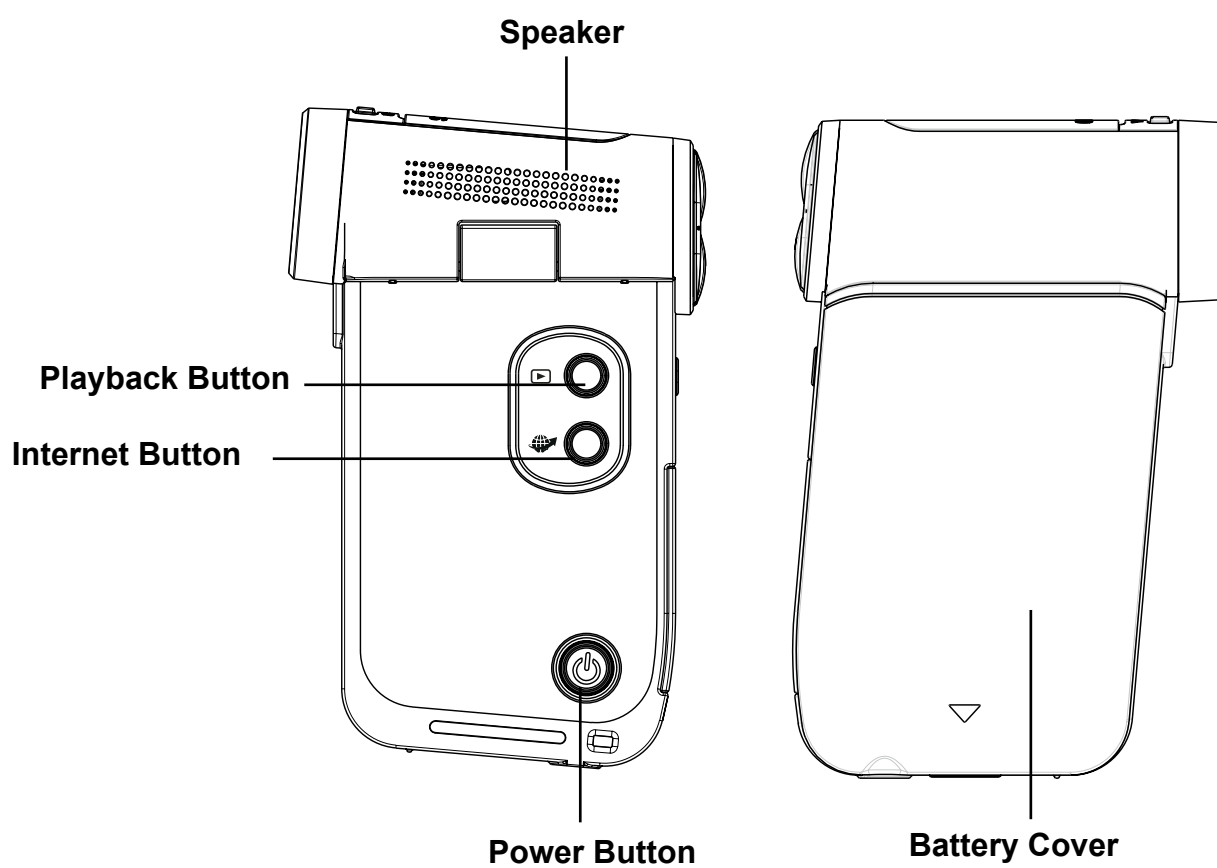 

## Bottom View

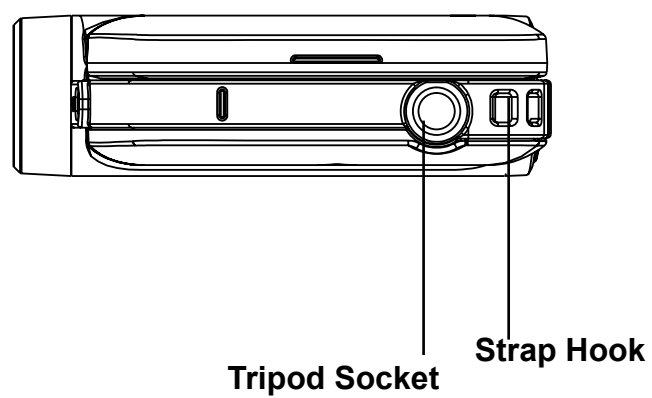 


## Section 2

# Getting Started

### Loading the Battery

Before using the camcorder, you must load the supplied Lithium-ion rechargeable battery.

 1. Insert the battery according to the correct polarity marks ( + or -).
2. Close the battery cover firmly.

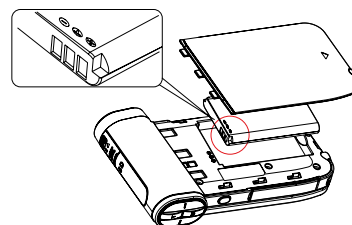

#### CAUTION

 
*RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS .*

### Charge your battery

You must use the supplied AC charger or the USB cable.

The camcorder must be turned OFF; blinking light confirms charging, and the light becomes constant when the charging has been completed.


In AC charging Mode, the light will turn itself off automatically after 3~5 minutes . The full charge time is about 3.5 to 4.5 hours. (Actual charging time may vary. It depends on the battery conditions.)

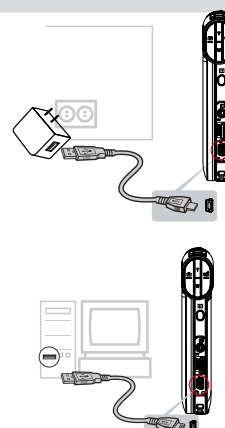

### Inserting and Removing an SD Card (Optional)


The camcorder comes with an internal memory which allows you to store photos and videos. You can expand the memory capacity by using an optional SD memory card.

 1. Insert the memory card into the slot. Please refer to the figure on the right side.
2. To remove an installed SD card, press the card inwards to release it.
3. When the card pops out, gently remove it from its slot.
4. Recommended memory capacity: 1GB or above.

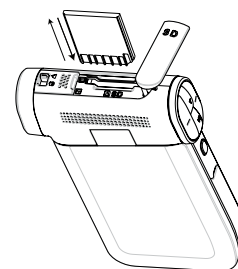

#### Note

 - When a memory card is fitted, videos/photos are saved on the card rather than on the built-in memory.
- *Protecting Data on an SD Card: SD Card is read-only when it is locked. No photos or videos can be recorded when the SD card is locked. Make sure the lock is on the writeable position before recording any media.*

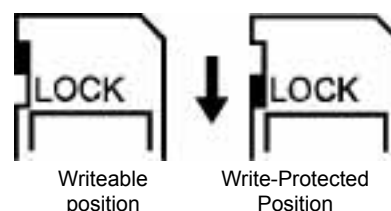





## Turning the Camcorder On


- To turn on the camcorder:
  1. Flip out the LCD panel; the camcorder will turn on automatically.
  2. Or press [Power Button] for one second to turn it on.

## Configuring the Initial Date and Time Setup

- The time setting screen appears to allow you to setup date and time:

Operation	Display Screen
<ol style="list-style-type: none"><li>1. Touch Year, Month, Day, Hour, Minute, and AM/PM to set.</li><li>2. Adjust the numeric value by touching  / </li><li>3. Touch the [OK] icon to validate the setting.</li><li>4. Touch the Exit icon (  ) to exit.</li></ol>	

## Getting Started

- To record video: Press [Video Button] to record video. To stop recording, press it again.
- To pause recording: Press [Pause Button] to pause recording. To continue the recording, press it again.
- To take a photo: Press [Photo Button] to take photo.
- To view stored videos and photos: Press [Playback Button] or touch  on the screen to switch to the Playback mode.

## Turning the Camcorder Off







 
- To turn off the camcorder: You can either press [Power Button] for one second, or you can place the LCD panel back to its original position.



## Section 3

# Using the Record Mode

### Button Function

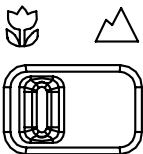

 




















	<p><b>Video Button:</b></p> <ol style="list-style-type: none"> <li>1. Press to take video.</li> <li>2. To stop recording, press it again.</li> </ol>
	<p><b>Photo Button:</b></p> <ol style="list-style-type: none"> <li>1. Press to take photo.</li> </ol>
	<p><b>Tele Button:</b></p> <ol style="list-style-type: none"> <li>1. Zoom In.</li> </ol> <p><b>Wide Button</b></p> <ol style="list-style-type: none"> <li>1. Zoom out.</li> </ol>
	<p><b>Pause Button:</b></p> <ol style="list-style-type: none"> <li>1. Press to pause the recording.</li> <li>2. To continue the recording, press it again.</li> </ol>
	<p><b>Power Button:</b></p> <ol style="list-style-type: none"> <li>1. Press down for one second to turn on or turn off the camcorder.</li> </ol>
	<p><b>Playback Button:</b></p> <ol style="list-style-type: none"> <li>1. Switch to the Playback Mode.</li> <li>2. For quick review, press it after recording.</li> </ol>
	<p><b>Macro Switch:</b></p> <ol style="list-style-type: none"> <li>1. Switch between Macro Mode and Normal Mode.</li> </ol>

## LCD Monitor Information

The indicators shown below may display on LCD when video and photo are recorded:



(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640X480)
		Slow Motion (Record video at QVGA resolution.)
	Photo Resolution	
		16MP
		5MP
		3MP
(2)	<b>00:05:30</b>	Recording time of the video that can still be taken at current resolution
	<b>1000</b>	Number of images that can still be taken at current resolution
(3)		Pre-Record Mode (Video Recording Only)
		Time Lapse (Video Recording Only)
(4)	White Balance	
		Daylight
		Fluorescent
		Tungsten




(5)	Scene	
		Skin
		Night
		Backlight
		Black/White
		Classic
		Negative
(6)		Self-timer enabled
(7)		Motion Detection (Video Recording Only)
(8)		Menu On
(9)		Playback Mode On
(10)		Digital Light On
		Light On
		Light Off
(11)		Stabilization (Video Recording Only)
(12)		Macro Focusing On
(13)		Date Printing On (Photo Only)
(14)		SD Card Inserted
(15)		Battery: full power
		Battery: medium power
		Battery: low power
		Battery: empty power
		DC power mode
(16)		Zoom meter: 1X~16X (16X Digital zoom)




 


### Note

- Stabilization, Pre-record, and Slow Motion functions cannot be used simultaneously.
- Pre-Record, Motion Detect, Slow Motion, and Time Lapse functions cannot be used simultaneously.

## Video Recording

- Press [Video Button] to start recording. When a video is being recorded, a time indicator will display on the LCD monitor (  00:00:25 ). To stop recording, press it again.
- To pause recording: Press [Pause Button] to pause recording (  00:00:36 ). To continue the recording, press it again.
- Press [Playback Button] or touch  on the screen to view the recorded video.
- Four resolution settings are available:

Video Quality	
	Full HD (1080p 30 fps)
	HD (720p 60 fps)
	HD (720p 30 fps)
	VGA (640X480)



### Note

- Pause function cannot be used when Time Lapse function is activated.

## Photo Capturing







- Press [Photo Button] to take photo.
- Press [Playback Button] or touch  on the screen to view the photo.
- Three resolution settings are available:


Image Quality	
	16 Mega Pixels
	5 Mega Pixels
	3 Mega Pixels

## Taking Close up Photo/Video

- Slide the macro switch to change the focus range for different distances of objects.
  1. Slide the macro switch to Macro (  ).
  2. Press [Video Button] to start recording or press [Photo Button] to take photo.
- In Macro Mode, the macro icon(  ) will appear on the LCD monitor.






### Note

Remember to turn the macro switch back to Normal (  ) when you are not taking close-up photo.





## Using Zoom Function

- The zoom magnifies images when recording video or taking photo.
  1. To zoom in/out, press the Tele/Wide Button.
  2. It can be set from 1X~16X (16X Digital zoom)

## Using Light Function


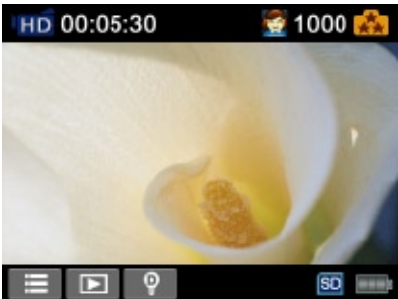 


- The setting allows you to extend the brightness of the objects that are dark or in the shadow. Using the on-screen button to change the settings.
  - Digital Light On** (  ): To extend the dynamic range for backlight and high contrast sense so that the objects will be brighter and clearer.
  - Light On** (  ): The light will be turned on and keep providing light.
  - Light Off** (  ): The light is turned off.
  - Press [Video Button] to start recording or press [Photo Button] to take photo.

## Options for Record Menu



Video	Photo	Effect	Setting*
			
<ul style="list-style-type: none"> <li>Resolution</li> <li>Stabilization</li> <li>Motion Detect</li> <li>Slow Motion</li> <li>Time Lapse</li> <li>Pre-record</li> </ul>	<ul style="list-style-type: none"> <li>Resolution</li> <li>ISO</li> <li>Self-Timer</li> </ul>	<ul style="list-style-type: none"> <li>Light</li> <li>Scene</li> <li>WB(White Balance)</li> <li>Face Tracking</li> </ul>	<ul style="list-style-type: none"> <li>Sound</li> <li>TV</li> <li>Language</li> <li>Time Setting</li> <li>Date Printing</li> <li>Format</li> <li>Default Setting</li> </ul>

\* Please refer to Section 5 for the detailed information about [Setting].

## Operations for Record Mode

Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen.	
2. Touch the option icons on the screen lightly with your finger. The options are Video, Photo, Effect, and Setting. 3. The option menu will pop up on the screen. 4. Touch to select the specific option you want to adjust. (The selected option will be highlighted.) 5. Touch the Exit icon (  ) to exit.	

## Video



Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  on the screen in Record Mode. The menu will show on the screen.</li> <li>2. Touch the [Video] icon on the screen. Submenu of Video will pop out on the screen.</li> <li>3. The Video submenu contains 6 options-- Resolution, Stabilization, Motion Detect, Slow Motion, Time Lapse, and Pre-record --for you to adjust the camcorder settings.</li> </ol>	



### Video Resolution

Four resolution settings are available.





- **FHD (1080p 30)** (Full HD (1080p30)):Record videos at 1920x1080p 30 fps resolution.
- **HD+ (720p 60)**:Record videos at 1280x720p 60 fps resolution.
- **HD (720p 30)**:Record videos at 1280x720p 30 fps resolution.
- **VGA (640X480)**: Record videos at 640x480p 30 fps resolution.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Resolution] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



### Stabilization

Record with an effect of reducing camcorder shake to result in more stable video.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Stabilization] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## Motion Detection

Record videos automatically when the camcorder detects a movement.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Motion Detect] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> <li>4. Camcorder will start to record video automatically if it detects a movement and it will stop recording if it does not detect a movement.</li> </ol>	



## Slow Motion

Record videos with slow motion effect. When the video is played, the playback time will be longer than the actual recording time.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Slow Motion] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## Time Lapse

Record still images at specific intervals you can set and play them as one video file.

- **Off:** Disable Time Lapse.
- **1 Second.:** Record one frame per second.
- **3 Seconds:** Record one frame every 3 seconds.
- **5 Seconds:** Record one frame every 5 seconds.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Time Lapse] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



### Note

- *Pause function cannot be used when Time Lapse function is activated.*



## Pre-record

The Pre-record function ensures that you will not miss any critical recording opportunities. The video is recorded 1 second more before the [Video Button] is pressed.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video menu, touch the [Pre-record] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



### Note

- Aim the camcorder at the subject and position it securely before the [Video Button] is pressed.

## Photo

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  on the screen in Record Mode. The menu will show on the screen.</li> <li>2. Touch the [Photo] icon on the screen. Submenu of Photo will pop out on the screen.</li> <li>3. The Photo submenu contains 3 options-- Resolution, ISO, and Self-Timer --for you to adjust the camcorder settings.</li> </ol>	



## Photo Resolution

Three resolution settings are available.



- **16MP**:Shoot photo at 4608 x 3456, 16MP quality.
- **5MP**:Shoot photo at 2592 x 1944, 5MP quality.
- **3MP**:Shoot photo at 2048 x 1536, 3MP quality.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Photo menu, touch the [Resolution] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## ISO

The camcorder adjusts the ISO sensitivity of its images automatically. Two manual ISO sensitivity settings are available. (800/1600). The larger the number is, the higher the ISO sensitivity is set to. Select a small number to shoot a smoother image. Select a large number to shoot an image in a dark location or to shoot a subject moving at high speed.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Photo menu, touch the [ISO] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	






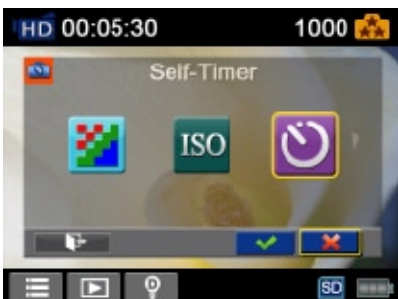 
### Note

The image may become noisy when the ISO number is large.


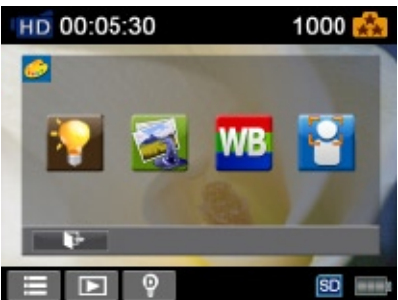 


## Self-Timer

The self-timer allows you to take photos with a ten-second time delay. The LED light on the front of the camcorder will also blink. The speed of blinking will increase just before the photo is taken.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Photo menu, touch the [Self-timer] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	

## Effect



Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  on the screen in Record Mode. The menu will show on the screen.</li> <li>2. Touch the [Effect] icon on the screen. Submenu of Effect will pop out on the screen.</li> <li>3. The Effect submenu contains 4 options-- Light, Scene, White Balance, and Face Tracking --for you to adjust the camcorder settings.</li> </ol>	



## Light

Three light settings are available.

- **Light On:** The light will be turned on and keep providing light.
- **Digital Light:** To extend the dynamic range for backlight and high contrast sense so that the objects will be brighter and clearer.
- **Light Off:** The light is turned off.


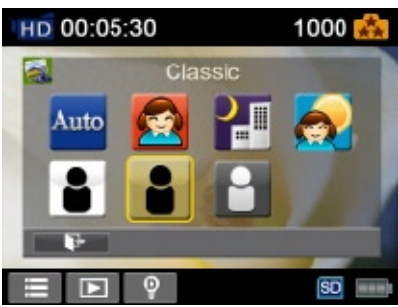 
Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Effect menu, touch the [Light] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## Scene

You can select the mode according to the scene condition.

- **Auto:** Shoot without any special effect on the image.
- **Skin:** Shoot with an effect that makes skin tones more natural.
- **Night:** Use Night Mode for night scenes or low light conditions.
- **Backlight:** You can take shots when the bright light is behind the subject.
- **Black/White:** The image is converted to black-and-white.
- **Classic:** The image is converted to a sepia look.
- **Negative:** The image is converted as the negative of the normal.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Effect menu, touch the [Scene] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## Note



To avoid blurry photos, place the camcorder on a flat, steady surface, or use a tripod when taking shots in the Night Mode.



## White Balance

The camcorder adjusts the color balance of images automatically. Three manual white balance settings are available:






- **Auto:** The camcorder automatically adjusts white balance.
- **Daylight:** Under outdoor condition.
- **Fluorescent:** Under fluorescent light condition.
- **Tungsten:** Under tungsten light condition.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Effect menu, touch the [White Balance] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



## Face Tracking (Photo Only)

The camcorder can detect human face(s) and focus on the face(s) automatically. This function can work with photo capturing. It is wonderful for capturing beautiful portraits in backlight situation.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Effect menu, touch the [Face Tracking] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	 



### Note







When Face Tracking is activated, aim the camcorder at the human face(s). The focus frame(s) will show on the LCD before the [Photo Button] is pressed.

## Section 4

# Using the Playback Mode

 
### Button Function

The Buttons have the following functions in Playback Mode.







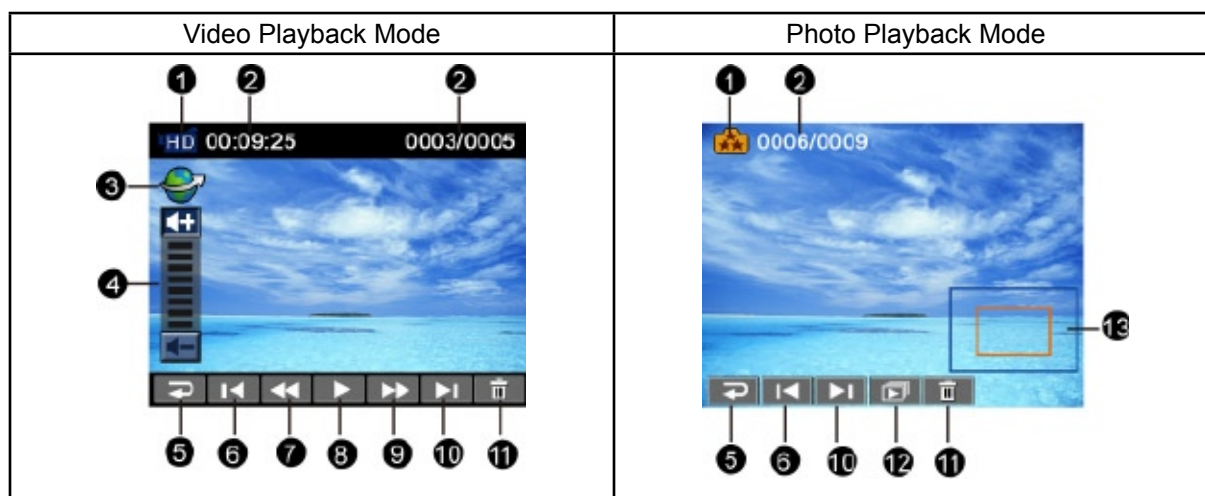

	<b>Video Button:</b> <ol style="list-style-type: none"> <li>1. Press to go the Record Mode</li> </ol>
	<b>Photo Button:</b> <ol style="list-style-type: none"> <li>1. Press to go the Record Mode</li> </ol>
	<b>Tele Button:</b> <ol style="list-style-type: none"> <li>1. Volume increase.</li> <li>2. Zoom in the photo</li> </ol> <b>Wide Button</b> <ol style="list-style-type: none"> <li>1. Volume decrease.</li> <li>2. Zoom out the photo</li> </ol>
	<b>Pause Button:</b> <ol style="list-style-type: none"> <li>1. In Video Playback Mode, press to pause the recorded video.</li> </ol>
	<b>Playback Button:</b> <ol style="list-style-type: none"> <li>1. Switch to the Playback Mode.</li> <li>2. For quick review, press it after recording.</li> </ol>
	<b>Internet Button:</b> <ol style="list-style-type: none"> <li>1. In Video Playback Mode, press to select the current video to upload to the Internet.</li> </ol>

## LCD Monitor Information

Indicators on the LCD screen while in Playback Mode:







(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640X480)
		Slow Motion (QVGA)
	Photo Resolution	
		16MP
		5MP
		3MP
(2)	00:09:25	Video playback time counter.
	0003/0005	Current number/ Total number of photo/video.
(3)		The current file is selected to upload to the Internet.
(4)		Volume
(5)		Return
		Video stop
(6)		Previous video/photo
(7)		Video fast rewind

(8)		Video play
		Video pause
(9)		Video fast forward
(10)		Next video/photo
(11)		Delete
(12)		Slideshow
		Slideshow stop
(13)		Magnification Indicator

## Operations for Playback Mode

The Playback Mode is for viewing and managing videos and photos on the built-in memory or on an SD Card.

Operation	Display Screen
1. Press [Playback Button] or touch  on the screen to switch to the Playback mode.	
2. Touch to select the specific option. 3. Touch (  ) to back to Record Mode.	

## Video Playback

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Video Playback mode, touch  to play or pause the video.</li> <li>2. Sweep to the right or touch  to go to the previous video; sweep to the left or touch  to go to the next video.</li> <li>3. While playing video, touch  /  to fast rewind/forward.</li> <li>4. Touch  to increase the volume; touch  to reduce the volume.</li> <li>5. Touch (  ) to exit.</li> <li>6. Press the Internet Button to select the current video to upload to the Internet.</li> </ol>	



### Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically.

## Delete Videos

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  to go to the Delete option screen.</li> </ol>	
<ol style="list-style-type: none"> <li>2. Touch [Yes] to delete the current video or [No] to cancel the operation and to exit; touch [All (Delete All)] to delete all videos.</li> <li>3. Before all videos are about to be deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.</li> </ol>	









### Note

- If a memory card has been inserted, you can only delete those videos stored on the card.
- Videos on a written-protected memory card cannot be deleted.



## Photo Playback



 
 
Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Photo Playback mode, sweep to the right or touch  to go to the previous photo; sweep to the left or touch  to go to the next photo.</li> <li>2. While the photo is selected, press [Tele Button] to magnify. (The magnification Indicator appears on the screen)</li> <li>3. To navigate the magnified photo, press on the screen and move as well. (The inner Magnification Indicator turns red)</li> <li>4. Press [Wide Button] to zoom out or exit the magnification mode.</li> <li>5. Touch  /  to start or to stop the slide show.</li> <li>6. Touch (  ) to exit.</li> </ol>	



### Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically.

## Delete Photo

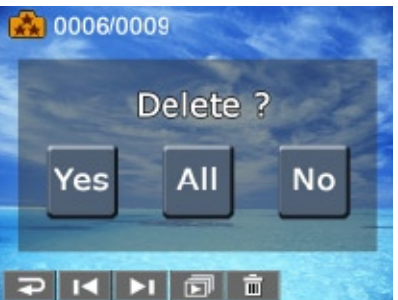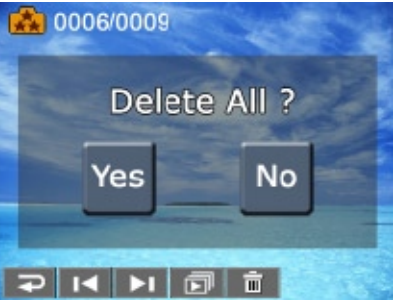Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  to go to the Delete option screen.</li> </ol>	
<ol style="list-style-type: none"> <li>2. Touch [Yes] to delete the current photo or [No] to cancel the operation and to exit; touch [All (Delete All)] to delete all photos.</li> <li>3. Before all photos are deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.</li> </ol>	 



### Note



- If a memory card has been inserted, you can only delete those photos stored on the card.
- Photos on a written-protected memory card cannot be deleted.
- The delete function will only erase unlocked photos. Locked photos must be unlocked before being deleted.



## Section 5

# Setting Your Camcorder





### Setting Menu

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. Touch  on the screen in Record Mode. The menu will show on the screen.</li> <li>2. Touch the [Setting] icon on the screen. Submenu of Setting will pop out on the screen.</li> <li>3. The Setting submenu contains 7 options for configuring your camcorder setup. They are Sound (operation sound), TV, Language, Time Setting, Date Printing, Format, and Default Setting.</li> </ol>	



### Sound

Enable or disable the keypad tone and the operation sound.



Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Setting menu, touch the [Sound] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	



### TV

Ensure that the appropriate TV standard of your area is selected – either NTSC or PAL. Wrong TV system setting may cause image flickers.



- **NTSC**(60Hz):USA, Canada, Japan, South Korea and Taiwan, etc.
- **PAL**(50Hz):UK, Europe, China, Australia, Singapore and Hong Kong, etc.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Setting menu, touch the [TV] icon on the screen.</li> <li>2. Touch to select [PAL] or [NTSC].</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	







## Language

Use this option to select the language of the user interface.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Setting menu, touch the [Language] icon on the screen.</li> <li>2. Touch to select the desired option.</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	







## Time Setting

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Setting menu, touch the [Time Setting] icon on the screen to enter the time setting screen.</li> <li>2. Touch Year, Month, Day, Hour, Minute, and AM/PM to set.</li> <li>3. Adjust the numeric value by touching  / .</li> <li>4. Touch the [OK] icon to validate the setting.</li> <li>5. Touch the Exit icon (  ) to exit.</li> </ol>	



## Date Printing

Imprint the date and time on the photo.

Operation	Display Screen
<ol style="list-style-type: none"> <li>1. In the Setting menu, touch the [Date Printing] icon on the screen.</li> <li>2. Touch to select [On] or [Off] (   ).</li> <li>3. Touch the Exit icon (  ) to exit.</li> </ol>	










### Note

- Date Printing function cannot be used in Video Record Mode.



## Format

- **Yes:** Format the built-in memory ( When there is no SD card in the camcorder ) / SD Card (When there is an SD card in the camcorder).
- **No:** Do not format the built-in memory ( When there is no SD card in the camcorder ) / SD Card (When there is an SD card in the camcorder).

Operation	Display Screen
1. In the Setting menu, touch the [Format] icon on the screen. 2. Touch to select [Yes] or [No] (   ). (Touch [Yes]  to enter the confirmation screen.)	
3. Touch the [Yes]  icon to execute the operation and the [No]  icon to cancel the operation.	





### Note

All the data will be erased if the SD card is formatted. Make sure all the data are copied to your PC before formatting the SD card.



## Default Setting

To restore the default factory setting, select this option.

Operation	Display Screen
1. In the Setting menu, touch the [Default Setting] icon on the screen. 2. Touch to select [Yes] or [No] (   ). (Touch [Yes]  to enter the confirmation screen.)	
3. Touch the [Yes]  icon to execute the operation and the [No]  icon to cancel the operation.	

The following table indicates the camcorder's default settings

 
<b>Setting</b>	<b>Default Factory Setting</b>
<b>Resolution</b>	FHD (1080p 30) for Video 5MP for Photo
<b>Stabilization</b>	Off
<b>Motion Detection</b>	Off
<b>Slow Motion</b>	Off
<b>Pre-Record</b>	Off
<b>Time Lapse</b>	Off
<b>Self-Timer</b>	Off
<b>ISO</b>	Auto
<b>Scene</b>	Auto
<b>White Balance</b>	Auto
<b>Light</b>	Off
<b>Sound</b>	On
<b>TV</b>	NTSC
<b>Language</b>	English
<b>Date Printing</b>	Off
<b>Volume</b>	Level 6

## Section 6

# Viewing Photos and Videos on TV

### Connecting to a High-Definition 16:9(Wide) TV

1. Connect the HDMI cable to your camcorder's HDMI Out port.
2. Connect the other end of the cable to a television.
3. Set the video input source of your TV to "HDMI."
4. The steps for viewing stored videos and photos on HDTV are exactly the same as for viewing them on the LCD screen.

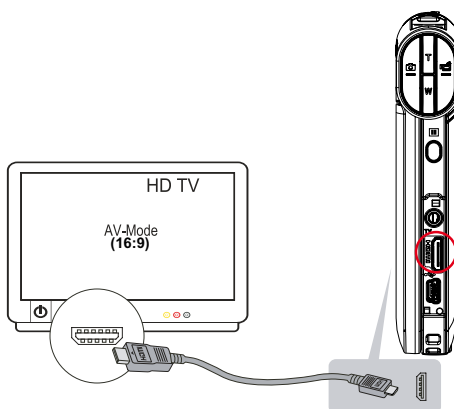


#### Note

- Some icons on the LCD screen do not display when the camcorder is connected to an HDTV.
- Some functions may not be accessible while the camcorder is connected to an HDTV.

### Connecting to a non-high-definition 4:3 TV

 1. Connect one end of the AV cable to your camcorder's AV out port.
2. Connect the other end of the cable to a television.
3. The steps for viewing stored videos and photos on TV are exactly the same as for viewing them on the LCD screen.

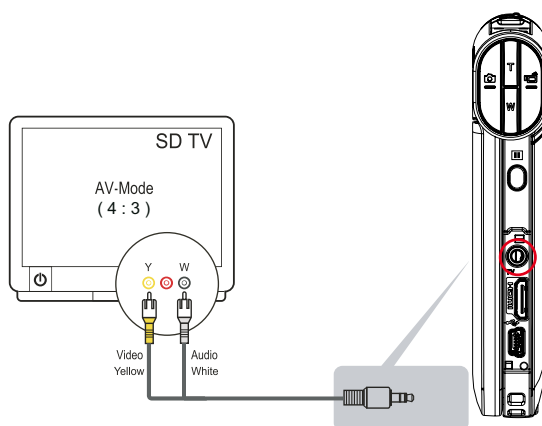

#### Note

- Some icons on the LCD screen do not display when the camcorder is connected to a TV.
- Some functions may not be accessible while the camcorder is connected to a TV.

## Section 7

# Viewing Video & Photo on PC

### Installing Bundled Software

The CD-ROM supplied with this camcorder contains 2 pieces of software.

- **ArcSoft MediaImpression** is a user-friendly application that helps you managing your media, burning your video into DVD, and uploading your files to the web sites easily.
- **Adobe Reader** is a popular program that you need to have installed to read the User's Manual. Many computer users will find they already have this software installed on their computer.

To install the bundled software:

1. Insert the CD-ROM into your computer's CD-ROM drive. The autorun screen appears.
2. Click "**Install ArcSoft MediaImpression**". Follow the on-screen instructions to complete the installation.



#### Note

- Detailed information can be found in the online help of all the bundled software.
- Install the bundled software application, ArcSoft MediaImpression, for viewing the video correctly on a PC.

### Transferring Photos or Videos to a Computer

You can transfer photos or videos stored on your camcorder to a computer and send them in e-mails to friends or post them on the web sites.

To do this you should:

1. Connect the computer and camcorder with the supplied mini USB 2.0 cable. .
2. The videos and photos can be found on your computer at "My Computer\Removable Disk\DCIM\100MEDIA". (On the SD card in the camcorder)
3. Under this folder, you can view, delete, move, or copy any video/photo you want.



#### DISCLAIMER


- Mac users need to download a third party software in order to view AVI video files. Quick Time (Mac) does not read video files in AVI format.

 
## Section 8


# Uploading Files to Internet

The built-in **Internet Direct** application offers you an easy way to upload your files to Internet instantly. It helps you share them with your family and friends on the web site.

To upload video files marked with  to Internet:

1. Select the video clip files in Video Playback mode by pressing the [Internet Button] ().
2. Connect the camcorder to your computer by using the supplied USB cable.

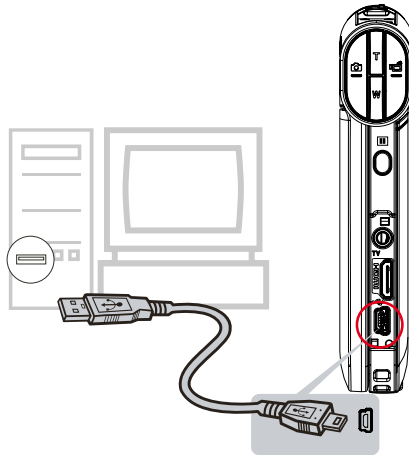

3. Press [Internet Button] () on the camcorder to launch the Internet Direct application automatically.
4. The main screen appears automatically on the desktop. (To view the recorded clips on Internet Direct, it is necessary to install ArcSoft MediaImpression first.)






### Note

- The social media Web site may not be accessible in certain regions.
- You must have internet access to upload videos to a Web site.



5. Upload files:

- ◆ Press [Internet Button] (  ) on the camcorder again.
- ◆ The video clips marked with the  icon are uploaded to the website automatically. (You may be asked to fill in your account information before uploading or you can fill in the information before uploading by clicking on the (  ) icon.
- ◆ Click [CANCEL] to stop uploading.





**To upload video files selected manually to a Web site:**

1. Follow the steps 2 and 3 on the previous page.
2. On the thumbnail screen, click the up/down icon to change pages. Click on the video clips you want to upload.
3. Click on "UPLOAD" to start uploading.






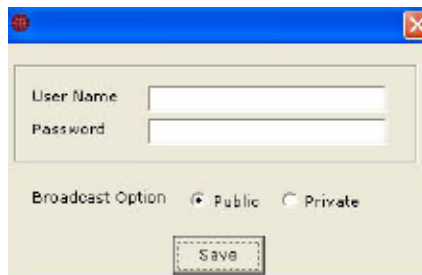 
**To playback the video file:**

1. Double-click the video clip on the thumbnail screen.
2. Click on the Play/Pause icon  to play/pause. Click on the Return icon  to return to the thumbnail preview screen.



**To setup your account information for the web site:**

1. Click on  to go to the setup screen.
2. Fill in your account information in the blanks. Then click on "Save".

The image shows a screenshot of a web form for account setup. It has a blue title bar with a red close button. The form contains two input fields labeled "User Name" and "Password". Below these fields, there is a "Broadcast Option" section with two radio buttons: "Public" (selected) and "Private". At the bottom of the form, there is a "Save" button.

(If you do not have an account, please sign up on the Web site first.)

## Section 9

# Specifications and System Requirements

Specification	
Image sensor	5 Mega pixel CMOS sensor
Operation modes	Video record, Photo record
Lens	Fixed Focus (F 2.5)
Focus range	Macro Mode:20cm Normal Mode: 110 cm ~ infinite (HD+(720p 60) & HD(720p 30) ) 150cm ~ infinite (Photo & Full HD (1080p 30))
Zoom	1X~16X (16X Digital zoom)
Shutter	Electronic
LCD monitor	3" touch LCD
Storage media	Built-in 128MB memory (partial memory is used for firmware code and sofeware); SD/SDHC/SDXC card slot support (up to 64GB)
Image resolution	16MP: 4608 x 3456 (16M pixels) (Interpolated) 5MP: 2592x1944 (5M pixels) 3MP: 2048x1536 (3M pixels)
Video resolution	Full HD (1080p 30): 1920X1080(30fps) HD+ (720p 60): 1280X720(60fps) HD (720p 30): 1280X720(30fps) VGA (640X480): 640X480(30fps)
White balance	Auto/Manual (Daylight, Fluorescent, Tungsten)
ISO	Auto/800/1600
Self-timer	10 seconds delay
Light	Light On/ Digital Light / Light Off
File format	Photo: JPEG Video: AVI (H.264)
Image play	Single image/Slideshow
PC interface	Mini USB 2.0 port
TV out	NTSC/PAL selectable, HDMI
Battery	Lithium-ion rechargeable battery
Dimension	60 / 74mm (W) × 111mm (H) × 20 / 22mm (T)
Weight	128 g ( without battery)

## System requirements



- Microsoft Windows XP/Vista/7
- Intel Pentium 4, 2.4 GHz or above
- 512 MB RAM
- 1 GB free HDD space
- Available USB port
- CD-ROM Drive
- 16-bit Color Display



### Note

*The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.*

## Trademarks

- ArcSoft and MediaImpression are registered trademarks of ArcSoft, Inc.   
www.arcsoft.com
- YouTube and the YouTube logo are registered trademarks of Google, Inc. 
- Microsoft, Windows, and Windows XP/Vista/7 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Secure Digital, SD, and SDHC are trademarks of SD Card Association.

All other brand and product names are trademarks or registered trademarks of their respective companies.

## Section 10

# Troubleshooting

### Troubleshooting

**1. If the LCD preview is not clear while shooting, how can the focus be adjusted?**

Try to switch between Macro and Normal Mode.

**2. The files on the memory card do not display smoothly when the LCD shows the “!” marking.**

The “!” means the SD card is low speed or it has the wrong content inside. The way to solve this condition is to format SD card through the camcorder instead of a PC (Please refer to the detailed Format instruction in User's Manual-Section 5).

Or please change the SD/SDHC/SDXC card to a high speed one.

**3. Why do some of my indoor photos look blurry and dark?**

The camcorder extends photo exposure time under low light/ indoor condition. Keep the camcorder (and the target subject) steady for several seconds when taking photos. The shutter will sound when photo is being taken.

**4. How do I charge battery?**

You must use the supplied AC charger and the USB cable. The camcorder must be turned OFF. A blinking light will indicate active charging and a solid light indicates that charging is complete. In AC charging mode, the full charging time is about 3.5- 4.5 hours and the light will turn off automatically after 3~5 minutes. (Actual charging time may vary. It depends on the battery condition.)

**5. After connecting the USB cable to the computer:**

1. The disk [DV] indicates the internal memory of the camcorder. (The disk label may be different according to different model and PC OS.)
2. [Removable Disk] indicates the external memory. (If the SD card is in the camcorder.)
3. The disk [DVAP] indicates the built-in Internet Direct application is saved at this disk. Please DO NOT format this disk or delete the application inside; otherwise, the Internet Direct application cannot function.

# FCC Statement

## Caution Statement

“Modifications not approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

## Instruction Statement



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER’S AUTHORITY TO OPERATE THE EQUIPMENT.

# **Swinton Avenue Trading, Inc.**

## **Limited One Year Product Warranty**

This limited warranty covers the original purchase of new product used for normal commercial, personal or household use. Swinton Avenue Trading, Inc. (SAT) warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for one (1) year from the date of purchase, except as provided below. SAT, at its option, will replace with a comparable product, free of charge, any product which fails under normal use as a result of such defect. This warranty does not apply to damage caused by fire, accident, negligence, misuse, improper cleaning or other circumstances not directly attributable to manufacturing defects.

Proof of purchase is required in the form of a receipt (copy or original) to validate warranty. If you do not have a copy of your store receipt and paid using a check or a major credit card, a copy can be obtained from Office Depot's receipt retrieval department at 1-800-721-6592.

If SAT chooses to provide a refund for such product, it will be fulfilled in the form of an Office Depot Merchandise card. Claims fulfilled in this manner take approximately 90 days to process.

SAT PROVIDES THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. EXPRESSLY EXCLUDED ARE ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. SAT'S SOLE OBLIGATION AND THE USER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT AT SAT'S SOLE DISCRETION AND COST, OF PRODUCT OR COMPONENTS.

IN NO EVENT SHALL SAT, ITS AFFILIATES, SUBSIDIARIES OR PARENT COMPANIES BE RESPONSIBLE FOR CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES ARISING OUT OF A CLAIM OF DEFECTIVE PRODUCT EVEN IF SAT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY STATE OR PROVINCE.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.

### **Return Instructions**

Please call 1-877-777-HELP (1-877-777-4357) for warranty service or product support.